



### Fire Hydrant Meter Instructions

- 1- Use MRWSSD fire hydrants marked with a red plastic tag. MRWSSD fire hydrants are marked with pressures and the number of the fire hydrant. Do not use high pressure fire hydrants marked with yellow paint or if it shows over 150 psi on the tag. – If you are unsure if it is a MRWSSD fire hydrant please call our office. 435-940-1916
- 2- The proper fire hydrant wrench must be used on all MRWSSD fire hydrants to open and close fire hydrants- If you need to rent one, we have those available.
- 3- Securely attach fire hydrant meter to fire hydrant.
- 4- Slowly open the fire hydrant, using the operating nut located on top of the fire hydrant.
- 5- Fully open the fire hydrant until the operating nut stops. Failure to do this will result in damage to the fire hydrant.
- 6- While filling and using the fire hydrant meter use the valve on the meter to control the flow. Use the valve on the hydrant meter to shut of the water.
- 7- If doing multiple fills throughout the day, leave the fire hydrant on and use the valve on the fire hydrant meter to regulate the flow.
- 8- When removing the fire hydrant meter, slowly turn the operating nut on the fire hydrant until it is completely closed.
- 9- Open the valve on the fire hydrant meter to release any existing pressure.
- 10- Remove fire hydrant meter and ensure the fire hydrant is draining.
- 11- Fire hydrant meter should be stored in dry, warm secure location.

The business and operator will be responsible for the proper use of the fire hydrant and meter. Any damage for inappropriate use will be billed to account.